

Low Battery Warning Feature

Show Battery Status

If this option is checked, (**Options/Summary** tab) Temprecord will display the approximate amount of battery capacity remaining as a percentage of the new battery capacity in the **Summary** view, and include it in any printed PDF reports that include the summary.



When the remaining battery capacity falls below 25%, this icon will show to the right of the displayed percentage.



When the remaining battery capacity falls below 5%, this icon will show to the right of the displayed percentage.



When the remaining battery capacity falls below a level where the logger cannot be expected to operate reliably, this icon will show to the right of the displayed percentage.



Warn when battery exhausted

If this option is checked, Temprecord will display the warning dialog when any attempt is made to reuse, program, or start a logger whose battery capacity remaining is less than 5%. This option has no effect unless the Show battery status option is checked.



The remaining logger battery capacity is not measured directly, but is calculated using Temprecord's knowledge of the past use of the logger. The figure arrived at is conservative, i.e. you may well get more use out of the logger than the displayed remaining battery capacity suggests. We do not recommend this, however, and a logger with a battery that shows as exhausted should be removed from service.